



Insert the RH thread into the 7075 block.  
A drop of threadlock (not included), will help to have a proper assembly


Suggest to use Loctite 222 ( Pink)

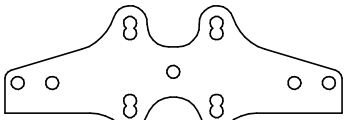

*M33-16B 6°-12° - Default*

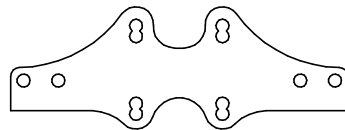

*M33-16C 3°-9° option*

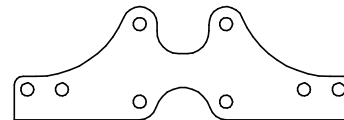

*M33-16D 15° option*

***FENIX RACING***